

For product reference prefix: BSS

Intastop Ltd can take no responsibility for incorrect operation of Door Bollards that are not fitted as per directed in these instructions.

1. There is a central M16 Rawl Bolt running the length of the Bollard.
2. Remove End Cap from Bollard.
3. Position the Bollard on the floor and mark the centre where the Bollard is to be installed.
4. Drill the floor in order to take the M16 Rawl bolt.
5. Position Bollard and tighten up Rawl Bolt via the Nut at top of Bollard using suitable spanner or Socket.
6. Push End Cap supplied into top of Bollard to conceal fixing.

FIXING INSTRUCTION