

For product reference prefix : RDS

Intastop Ltd can take no responsibility for incorrect operation of Hinges that are not fitted as per directed in these instructions

1. If retrofit, then remove existing doorstep in closing side of frame and make good.
2. Position the frame leaf of the hinge on the frame and ensure the leaf alignment is seated level along the full length of the frame and that the anti ligature tip is at the frame head.
3. Mark in the frame where to rebate for locking system then rebate. Drill into face of frame enabling key to be located.
4. With the hinge leaves open position the hinge against frame jamb. Ensure the leaf alignment flange is tight against the face of the frame. Allow 3mm maximum gap between head of the frame & top of the hinge for clearance. Mark and drill for 1 " x 10 csk screws. Drill 3mm-3.5mm pilot hole and screw fix the hinge to the frame.
5. Test the operation of the stop to check for proper swing and clearance, adjust if required.
6. The lock can be adjusted by means of the screw on the faceplate.